



Dodatečná informace

Zadavatel veřejné zakázky tímto podává podle § 49 zákona č. 137/2006 Sb., o veřejných zakázkách, ve znění pozdějších předpisů (dále jen „ZVZ“) dodatečnou informaci k výzvě/zadávací dokumentaci k veřejné zakázce s názvem „Rozšíření telefonní ústředny MD110“ uveřejněné dne 22. 5. 2012.

Identifikační údaje zadavatele:

Obchodní firma/název: Technická univerzita v Liberci
Sídlo: Studentská 2, 461 17 Liberec
IČ: 46747885
Jednající: rektorem

Vážený uchazeči,

k dotazu č.1:

na základě výzvy k podání nabídky na rozšíření telefonní ústředny MD110 bych Vás chtěl poprosit o zaslání konfigurace Vaší stávající telefonní ústředny MD110. Tento údaj je třeba pro kalkulaci ceny za upgrade.

sdělujeme odpověď:

Aktuální konfigurace telefonní ústředny MD110:

LIM CONFIGURATION

LIM NUMBER 1

LIM CONTROL LIM CONTROL NUMBER OF SERVICE
SYSTEM SIDE SYSTEM STATE PCM-LINKS STATE LIM
A EXECUTING 2 ACTIVE
B NOT EQUIPPED

MEMORY MEMORY MEMORY SPARE

VOLUME SPARE AFTER PACKING

65535 KB 14186 KB 14186 KB

BUAR1 3352 KB BUAR2 2695 KB

INTER LIM SIGNAL PACKET LENGTH CAPABILITY

BPOS CAPABILITY

001-0-00 90

001-1-00 90

DEVICE BOARDS

NUMBER OF

BPOS BOARDID INDIVIDUALS SERVICE STATE

001-0-00 36 32 ACTIVE

001-0-10 78 32 ACTIVE

001-0-20 57 32 ACTIVE

001-0-30 57 32 ACTIVE

001-0-40 77 16 ACTIVE

001-0-42 NOT EQUIPPED

001-0-43 NOT EQUIPPED





001-0-50	87	16	ACTIVE
001-0-52	87	16	ACTIVE
001-0-60	106	16	ACTIVE
001-0-62			NOT EQUIPPED
001-0-63	96	1	ACTIVE
001-0-70	42	32	ACTIVE
001-1-00	36	32	ACTIVE
001-1-10	78	32	ACTIVE
001-1-20			NOT EQUIPPED
001-1-21			NOT EQUIPPED
001-1-22			NOT EQUIPPED
001-1-23			NOT EQUIPPED
001-1-30	57	32	ACTIVE
001-1-40			NOT EQUIPPED
001-1-41			NOT EQUIPPED
001-1-42			NOT EQUIPPED
001-1-43			NOT EQUIPPED
001-1-50	87	16	ACTIVE
001-1-52	87	16	ACTIVE
001-1-60	87	16	ACTIVE
001-1-62	87	16	ACTIVE
001-1-70	30	6	PASSIVE
001-1-71	95	6	ACTIVE
001-1-72	95	6	ACTIVE
001-1-73	31	8	PASSIVE
001-2-00	36	32	ACTIVE
001-2-10	78	32	ACTIVE
001-2-20			NOT EQUIPPED
001-2-21			NOT EQUIPPED
001-2-22			NOT EQUIPPED
001-2-23			NOT EQUIPPED
001-2-30	57	32	ACTIVE
001-2-40			NOT EQUIPPED
001-2-41			NOT EQUIPPED
001-2-42			NOT EQUIPPED
001-2-43			NOT EQUIPPED
001-2-50	87	16	ACTIVE
001-2-52	87	16	ACTIVE
001-2-60	87	16	ACTIVE
001-2-62	87	16	ACTIVE
001-2-70	87	16	ACTIVE
001-2-72			NOT EQUIPPED
001-2-73	34	3	PASSIVE

LIM NUMBER 2

LIM CONTROL LIM CONTROL NUMBER OF SERVICE
SYSTEM SIDE SYSTEM STATE PCM-LINKS STATE LIM

A EXECUTING 2 ACTIVE

B NOT EQUIPPED

MEMORY MEMORY MEMORY SPARE

VOLUME SPARE AFTER PACKING

65535 KB 20227 KB 20227 KB





BUAR1 2974 KB BUAR2 2401 KB
INTER LIM SIGNAL PACKET LENGTH CAPABILITY
BPOS CAPABILITY
002-0-00 90
002-1-00 90

DEVICE BOARDS

NUMBER OF

BPOS BOARDID INDIVIDUALS SERVICE STATE

002-0-00	36	32	ACTIVE
002-0-10	78	32	ACTIVE
002-0-20	57	32	ACTIVE
002-0-30	27	32	PASSIVE
002-0-40	87	16	ACTIVE
002-0-42	87	16	ACTIVE
002-0-50	87	16	ACTIVE
002-0-52	87	16	ACTIVE
002-0-60	87	16	ACTIVE
002-0-62	69	16	ACTIVE
002-0-70	42	32	ACTIVE
002-1-00	36	32	ACTIVE
002-1-10	78	32	ACTIVE
002-1-20	57	32	ACTIVE
002-1-30			NOT EQUIPPED
002-1-31			NOT EQUIPPED
002-1-32			NOT EQUIPPED
002-1-33			NOT EQUIPPED
002-1-40	77	16	ACTIVE
002-1-42	87	16	ACTIVE
002-1-50	87	16	ACTIVE
002-1-52	87	16	ACTIVE
002-1-60	87	16	ACTIVE
002-1-62	2	8	ACTIVE
002-1-63	2	8	ACTIVE
002-1-70	2	8	ACTIVE
002-1-71	2	8	ACTIVE
002-1-72	95	6	ACTIVE
002-1-73	31	8	PASSIVE
002-2-00	36	32	ACTIVE
002-2-10	78	32	ACTIVE
002-2-20	57	32	PASSIVE
002-2-30			NOT EQUIPPED
002-2-31			NOT EQUIPPED
002-2-32			NOT EQUIPPED
002-2-33			NOT EQUIPPED
002-2-40	87	16	ACTIVE
002-2-42	87	16	ACTIVE
002-2-50	87	16	ACTIVE
002-2-52	87	16	ACTIVE
002-2-60	87	16	ACTIVE
002-2-62	30	6	PASSIVE
002-2-63			NOT EQUIPPED





002-2-70	77	16	ACTIVE
002-2-72	95	6	ACTIVE
002-2-73	29	2	PASSIVE

LIM NUMBER 3

LIM CONTROL LIM CONTROL NUMBER OF SERVICE
SYSTEM SIDE SYSTEM STATE PCM-LINKS STATE LIM

A EXECUTING 1 ACTIVE

B NOT EQUIPPED

MEMORY MEMORY MEMORY SPARE

VOLUME SPARE AFTER PACKING

65535 KB 19751 KB 19751 KB

BUAR1 3165 KB BUAR2 2450 KB

INTER LIM SIGNAL PACKET LENGTH CAPABILITY

BPOS CAPABILITY

003-0-00 90

DEVICE BOARDS

NUMBER OF

BPOS BOARDID INDIVIDUALS SERVICE STATE

003-0-00 36 32 ACTIVE

003-0-10 102 32 ACTIVE

003-0-20 77 16 ACTIVE

003-0-22 77 16 ACTIVE

003-0-30 NOT EQUIPPED

003-0-31 NOT EQUIPPED

003-0-32 NOT EQUIPPED

003-0-33 NOT EQUIPPED

003-0-40 87 16 ACTIVE

003-0-42 87 16 ACTIVE

003-0-50 87 16 ACTIVE

003-0-52 87 16 ACTIVE

003-0-60 69 16 ACTIVE

003-0-62 NOT EQUIPPED

003-0-63 96 1 ACTIVE

003-0-70 42 32 ACTIVE

003-1-00 NOT EQUIPPED

003-1-01 NOT EQUIPPED

003-1-02 NOT EQUIPPED

003-1-03 NOT EQUIPPED

003-1-10 102 32 ACTIVE

003-1-20 87 16 ACTIVE

003-1-22 87 16 ACTIVE

003-1-30 87 16 ACTIVE

003-1-32 87 16 ACTIVE

003-1-40 87 16 ACTIVE

003-1-42 87 16 ACTIVE

003-1-50 87 16 ACTIVE

003-1-52 87 16 ACTIVE

003-1-60 87 16 ACTIVE

003-1-62 87 16 ACTIVE

003-1-70 87 16 ACTIVE





003-1-72	87	16	ACTIVE
003-2-00			NOT EQUIPPED
003-2-01			NOT EQUIPPED
003-2-02			NOT EQUIPPED
003-2-03			NOT EQUIPPED
003-2-10	102	32	ACTIVE
003-2-20			NOT EQUIPPED
003-2-21			NOT EQUIPPED
003-2-22			NOT EQUIPPED
003-2-23			NOT EQUIPPED
003-2-30	87	16	ACTIVE
003-2-32	87	16	ACTIVE
003-2-40	87	16	ACTIVE
003-2-42	87	16	ACTIVE
003-2-50	87	16	ACTIVE
003-2-52	87	16	ACTIVE
003-2-60	87	16	ACTIVE
003-2-62	87	16	ACTIVE
003-2-70	87	16	ACTIVE
003-2-72			NOT EQUIPPED
003-2-73			NOT EQUIPPED
003-3-00			NOT EQUIPPED
003-3-01			NOT EQUIPPED
003-3-02			NOT EQUIPPED
003-3-03			NOT EQUIPPED
003-3-10	102	32	ACTIVE
003-3-20			NOT EQUIPPED
003-3-21			NOT EQUIPPED
003-3-22			NOT EQUIPPED
003-3-23			NOT EQUIPPED
003-3-30	87	16	ACTIVE
003-3-32	87	16	ACTIVE
003-3-40	87	16	ACTIVE
003-3-42	87	16	ACTIVE
003-3-50	87	16	ACTIVE
003-3-52	87	16	ACTIVE
003-3-60	77	16	ACTIVE
003-3-62			NOT EQUIPPED
003-3-63	30	6	PASSIVE
003-3-70	77	16	ACTIVE
003-3-72	77	16	ACTIVE

LIM NUMBER 4

LIM CONTROL LIM CONTROL NUMBER OF SERVICE
SYSTEM SIDE SYSTEM STATE PCM-LINKS STATE LIM
A EXECUTING 1 ACTIVE
B NOT EQUIPPED
MEMORY MEMORY MEMORY SPARE
VOLUME SPARE AFTER PACKING
65535 KB 19681 KB 19681 KB
BUAR1 3215 KB BUAR2 2499 KB
INTER LIM SIGNAL PACKET LENGTH CAPABILITY





BPOS CAPABILITY
004-0-00 90

DEVICE BOARDS

NUMBER OF

BPOS BOARDID INDIVIDUALS SERVICE STATE

004-0-00	36	32	ACTIVE
004-0-10	102	32	ACTIVE
004-0-20	77	16	ACTIVE
004-0-22	77	16	ACTIVE
004-0-30	77	16	ACTIVE
004-0-32	87	16	ACTIVE
004-0-40	87	16	ACTIVE
004-0-42	87	16	ACTIVE
004-0-50	87	16	ACTIVE
004-0-52	87	16	ACTIVE
004-0-60	87	16	ACTIVE
004-0-62	87	16	ACTIVE
004-0-70	42	32	ACTIVE
004-1-00			NOT EQUIPPED
004-1-01			NOT EQUIPPED
004-1-02			NOT EQUIPPED
004-1-03			NOT EQUIPPED
004-1-10	102	32	ACTIVE
004-1-20	77	16	ACTIVE
004-1-22	77	16	ACTIVE
004-1-30	87	16	ACTIVE
004-1-32	87	16	ACTIVE
004-1-40	77	16	ACTIVE
004-1-42			NOT EQUIPPED
004-1-43			NOT EQUIPPED
004-1-50			NOT EQUIPPED
004-1-51			NOT EQUIPPED
004-1-52			NOT EQUIPPED
004-1-53			NOT EQUIPPED
004-1-60			NOT EQUIPPED
004-1-61			NOT EQUIPPED
004-1-62			NOT EQUIPPED
004-1-63			NOT EQUIPPED
004-1-70			NOT EQUIPPED
004-1-71			NOT EQUIPPED
004-1-72			NOT EQUIPPED
004-1-73			NOT EQUIPPED

LIM NUMBER 5

LIM CONTROL LIM CONTROL NUMBER OF SERVICE
SYSTEM SIDE SYSTEM STATE PCM-LINKS STATE LIM

A EXECUTING 2 ACTIVE
B NOT EQUIPPED

MEMORY MEMORY MEMORY SPARE
VOLUME SPARE AFTER PACKING
65535 KB 19973 KB 19973 KB





BUAR1 3141 KB BUAR2 2450 KB
INTER LIM SIGNAL PACKET LENGTH CAPABILITY
BPOS CAPABILITY
005-0-00 90
005-1-00 90

DEVICE BOARDS

	NUMBER OF		
BPOS	BOARDID	INDIVIDUALS	SERVICE STATE
005-0-00	36	32	ACTIVE
005-0-10	102	32	ACTIVE
005-0-20	77	16	ACTIVE
005-0-22			NOT EQUIPPED
005-0-23			NOT EQUIPPED
005-0-30			NOT EQUIPPED
005-0-31			NOT EQUIPPED
005-0-32			NOT EQUIPPED
005-0-33			NOT EQUIPPED
005-0-40	87	16	ACTIVE
005-0-42	87	16	ACTIVE
005-0-50	87	16	ACTIVE
005-0-52	87	16	ACTIVE
005-0-60	69	16	ACTIVE
005-0-62			NOT EQUIPPED
005-0-63	96	1	ACTIVE
005-0-70	42	32	ACTIVE
005-1-00	36	32	ACTIVE
005-1-10	102	32	ACTIVE
005-1-20	87	16	ACTIVE
005-1-22	87	16	ACTIVE
005-1-30	87	16	ACTIVE
005-1-32	87	16	ACTIVE
005-1-40	87	16	ACTIVE
005-1-42	87	16	ACTIVE
005-1-50	87	16	ACTIVE
005-1-52	87	16	ACTIVE
005-1-60	87	16	ACTIVE
005-1-62	87	16	ACTIVE
005-1-70	87	16	ACTIVE
005-1-72			NOT EQUIPPED
005-1-73			NOT EQUIPPED
005-2-00			NOT EQUIPPED
005-2-01			NOT EQUIPPED
005-2-02			NOT EQUIPPED
005-2-03			NOT EQUIPPED
005-2-10	102	32	ACTIVE
005-2-20	87	16	ACTIVE
005-2-22	87	16	ACTIVE
005-2-30	87	16	ACTIVE
005-2-32	87	16	ACTIVE
005-2-40	87	16	ACTIVE
005-2-42	87	16	ACTIVE





005-2-50	87	16	ACTIVE
005-2-52	87	16	ACTIVE
005-2-60	87	16	ACTIVE
005-2-62	87	16	ACTIVE
005-2-70	87	16	ACTIVE
005-2-72			NOT EQUIPPED
005-2-73			NOT EQUIPPED
005-3-00	48	32	PASSIVE
005-3-10	102	32	ACTIVE
005-3-20	102	32	ACTIVE
005-3-30	48	32	PASSIVE
005-3-40	87	16	ACTIVE
005-3-42	87	16	ACTIVE
005-3-50	87	16	ACTIVE
005-3-52			NOT EQUIPPED
005-3-53			NOT EQUIPPED
005-3-60			NOT EQUIPPED
005-3-61			NOT EQUIPPED
005-3-62	30	6	PASSIVE
005-3-63			NOT EQUIPPED
005-3-70	87	16	PASSIVE
005-3-72			NOT EQUIPPED
005-3-73			NOT EQUIPPED

LIM NUMBER 6

LIM CONTROL LIM CONTROL NUMBER OF SERVICE
SYSTEM SIDE SYSTEM STATE PCM-LINKS STATE LIM

A EXECUTING 2 ACTIVE

B NOT EQUIPPED

MEMORY MEMORY MEMORY SPARE

VOLUME SPARE AFTER PACKING

65535 KB 19865 KB 19865 KB

BUAR1 3132 KB BUAR2 2450 KB

INTER LIM SIGNAL PACKET LENGTH CAPABILITY

BPOS CAPABILITY

006-0-00 90

006-0-20 90

DEVICE BOARDS

NUMBER OF

BPOS BOARDID INDIVIDUALS SERVICE STATE

006-0-00 36 32 ACTIVE

006-0-10 102 32 ACTIVE

006-0-20 36 32 ACTIVE

006-0-30 87 16 ACTIVE

006-0-32 87 16 ACTIVE

006-0-40 87 16 ACTIVE

006-0-42 87 16 ACTIVE

006-0-50 87 16 ACTIVE

006-0-52 87 16 ACTIVE

006-0-60 87 16 ACTIVE

006-0-62 87 16 ACTIVE





006-0-70	42	32	ACTIVE
006-1-00			NOT EQUIPPED
006-1-01			NOT EQUIPPED
006-1-02			NOT EQUIPPED
006-1-03			NOT EQUIPPED
006-1-10	102	32	ACTIVE
006-1-20	102	32	ACTIVE
006-1-30	87	16	ACTIVE
006-1-32	87	16	ACTIVE
006-1-40	87	16	ACTIVE
006-1-42	87	16	ACTIVE
006-1-50	87	16	ACTIVE
006-1-52	87	16	ACTIVE
006-1-60	87	16	ACTIVE
006-1-62	87	16	ACTIVE
006-1-70			NOT EQUIPPED
006-1-71			NOT EQUIPPED
006-1-72	96	1	ACTIVE
006-1-73			NOT EQUIPPED
006-2-00			NOT EQUIPPED
006-2-01			NOT EQUIPPED
006-2-02			NOT EQUIPPED
006-2-03			NOT EQUIPPED
006-2-10			NOT EQUIPPED
006-2-11			NOT EQUIPPED
006-2-12			NOT EQUIPPED
006-2-13			NOT EQUIPPED
006-2-20	102	32	ACTIVE
006-2-30	87	16	ACTIVE
006-2-32	87	16	ACTIVE
006-2-40	87	16	ACTIVE
006-2-42	87	16	ACTIVE
006-2-50	87	16	ACTIVE
006-2-52	87	16	ACTIVE
006-2-60	87	16	ACTIVE
006-2-62	87	16	ACTIVE
006-2-70			NOT EQUIPPED
006-2-71			NOT EQUIPPED
006-2-72			NOT EQUIPPED
006-2-73			NOT EQUIPPED

LIM NUMBER 7

LIM CONTROL LIM CONTROL NUMBER OF SERVICE
SYSTEM SIDE SYSTEM STATE PCM-LINKS STATE LIM
A EXECUTING 1 ACTIVE
B NOT EQUIPPED
MEMORY MEMORY MEMORY SPARE
VOLUME SPARE AFTER PACKING
65535 KB 20056 KB 20056 KB
BUAR1 3105 KB BUAR2 2401 KB
INTER LIM SIGNAL PACKET LENGTH CAPABILITY
BPOS CAPABILITY





007-0-00 43

DEVICE BOARDS

NUMBER OF

BPOS BOARDID INDIVIDUALS SERVICE STATE

007-0-00	36	32	ACTIVE
007-0-10	102	32	ACTIVE
007-0-20	77	16	ACTIVE
007-0-22			NOT EQUIPPED
007-0-23			NOT EQUIPPED
007-0-30			NOT EQUIPPED
007-0-31			NOT EQUIPPED
007-0-32			NOT EQUIPPED
007-0-33			NOT EQUIPPED
007-0-40			NOT EQUIPPED
007-0-41			NOT EQUIPPED
007-0-42			NOT EQUIPPED
007-0-43			NOT EQUIPPED
007-0-50	87	16	ACTIVE
007-0-52	87	16	ACTIVE
007-0-60	87	16	ACTIVE
007-0-62			NOT EQUIPPED
007-0-63	30	6	PASSIVE
007-0-70	42	32	ACTIVE

LIM NUMBER 8

LIM CONTROL LIM CONTROL NUMBER OF SERVICE
SYSTEM SIDE SYSTEM STATE PCM-LINKS STATE LIM

A EXECUTING 1 ACTIVE
B NOT EQUIPPED

MEMORY MEMORY MEMORY SPARE

VOLUME SPARE AFTER PACKING

65535 KB 20377 KB 20377 KB

BUAR1 3009 KB BUAR2 2352 KB

INTER LIM SIGNAL PACKET LENGTH CAPABILITY

BPOS CAPABILITY

008-0-00 90

DEVICE BOARDS

NUMBER OF

BPOS BOARDID INDIVIDUALS SERVICE STATE

008-0-00	36	32	ACTIVE
008-0-10	102	32	ACTIVE
008-0-20	77	16	ACTIVE
008-0-22			NOT EQUIPPED
008-0-23			NOT EQUIPPED
008-0-30	77	16	ACTIVE
008-0-32			NOT EQUIPPED
008-0-33			NOT EQUIPPED
008-0-40			NOT EQUIPPED
008-0-41			NOT EQUIPPED
008-0-42			NOT EQUIPPED





008-0-43			NOT EQUIPPED
008-0-50	87	16	ACTIVE
008-0-52	87	16	ACTIVE
008-0-60	87	16	ACTIVE
008-0-62			NOT EQUIPPED
008-0-63			NOT EQUIPPED
008-0-70	42	32	ACTIVE
008-1-00			NOT EQUIPPED
008-1-01			NOT EQUIPPED
008-1-02			NOT EQUIPPED
008-1-03			NOT EQUIPPED
008-1-10	102	32	ACTIVE
008-1-20			NOT EQUIPPED
008-1-21			NOT EQUIPPED
008-1-22			NOT EQUIPPED
008-1-23			NOT EQUIPPED
008-1-30			NOT EQUIPPED
008-1-31			NOT EQUIPPED
008-1-32			NOT EQUIPPED
008-1-33			NOT EQUIPPED
008-1-40			NOT EQUIPPED
008-1-41			NOT EQUIPPED
008-1-42	87	16	ACTIVE
008-1-50	87	16	ACTIVE
008-1-52	87	16	ACTIVE
008-1-60	87	16	PASSIVE
008-1-62			NOT EQUIPPED
008-1-63			NOT EQUIPPED
008-1-70			NOT EQUIPPED
008-1-71			NOT EQUIPPED
008-1-72			NOT EQUIPPED
008-1-73	30	6	PASSIVE

V Liberci dne 23. 5. 2012

Loudová

Za zadavatele: Jitka Loudová

